



ADEMCO 4101SN

V-Plex® Single Output Relay Module INSTALLATION AND SETUP GUIDE

FEATURES

The ADEMCO 4101SN V-Plex® Single Output Relay Module can be used with control panels that support V-Plex Polling Loop devices, e.g. VISTA-128FBP (refer to the instructions for the control).

The 4101SN features the following:

- Form C relay contacts rated at 2A, Resistive 28VAC/VDC with contact supervision.



The position of the relay is supervised, but not the actual external contact wiring. Note: some panels may not support this feature.

Note: This product uses latching relays, which retain their open/closed position even when power is disconnected. Due to shocks or vibration during shipment and installation the out-of-box state of these relays may be either open or closed. When power is first applied, the relay will be set to its correct initial state. Please bear this in mind during installation; it is strongly recommended that you wire this module to the panel and apply power to the panel before energizing any external circuit controlled by the latching relay.

- One Class B/Style B EOLR-supervised aux input zone.
- Operating power and communication with control panels via the V-Plex polling loop.
- Electronics mounted in a small plastic case with tamper-protected cover.
- Suitable for household and commercial burglary, and household and commercial fire applications.

MOUNTING INSTRUCTIONS

1. Remove the case cover by first removing the screw. (See *Figure 1*.)
2. Fasten the case back to the wall with three #6 screws (not supplied) through the case back.



- The wall surface must be flat and substantially vibration-free.
- All power-limited wiring must be separated from non-power limited wiring by 1/4 -inch.



- For dry, indoor use only. Do not install in air-handling spaces.
- For Commercial Burglary installations, the 4101SN must be tamper protected or mounted in a tamper-protected cabinet. In Commercial Fire applications, the module cannot be mounted inside the control unit's cabinet, but can be mounted externally either in its plastic housing or in a separate metal cabinet.

WIRING INSTRUCTIONS



- For UL fire installations, no more than one wire per terminal may be connected.
- Use only 14-22AWG wire.

1. Run the wiring through the access slots in the case back and connect at the appropriate terminal block screw(s).
2. Make wiring connections as shown in *Figure 1*. When you leave the white jumper intact, the 10k

EOLR for the aux zone is internal. Only N.O. devices may be used, and these devices must be mounted no farther than 3 feet from the module. In commercial installations, wiring must be mechanically protected with conduit or equivalent.

3. When you cut the white jumper, you must connect the 10k EOLR for the aux zone to the end of the zone wire run.
4. Either N.O. or N.C. devices may be used, and these devices may be located where desired.



For Commercial Fire Applications, use only N.O. contact closure devices.

5. When the aux zone is programmed for burglary response type, you may use the discrete 10k resistor (supplied). When this zone is programmed for fire response type, you must use the model number WA 610-13 resistor (supplied).
6. Place the cover over the PCB and insert the screw to hold it in place.

PANEL PROGRAMMING INSTRUCTIONS

The 4101SN Module's serial number must be enrolled in the control panel so that the panel can communicate with it. Each 4101SN (if there is more than one connected to the polling loop) is enrolled one at a time.

The following steps outline the general procedure for how this is done. Refer to the control panel's Installation Instructions for additional information.

1. Enter the panel's Programming mode.
2. Enter Zone Programming mode.
 - Assign a unique zone number and a non-zero zone response type to the 4101SN. This zone will be used to annunciate aux zone faults, communication problems, and cover tamper faults for this 4101SN.
 - Select Input Type = "06" (for serial number polling loop device), V-Plex Relay = "Yes" and Loop # = "1" for this zone.
 - Select the Learn S/N = "Yes" option. Remove the enclosure cover (or short the aux zone) to cause the 4101SN to send its serial number to the panel. The panel will acknowledge receipt of the serial number and will require the cover to be replaced (or the aux zone to be restored) to confirm that the serial number was enrolled correctly.



The cover tamper feature must be used in commercial burg installations when the 4101SN is not mounted inside the panel's enclosure, and must be enabled at the control panel (program field *24=0 on most controls).

Enter Relay Programming mode.

1. Assign a unique 2-digit relay number "XX" and then assign relay start/stop activation options to the 4101SN.
2. Select Relay Type = "0" (for V-Plex relay) and then enter the zone number selected in Zone Programming as the V-Plex Zone Number. The

panel will annunciate relay activation problems as well as communication problems and cover tamper faults for this 4101SN on system zone 6XX where "XX" is the selected relay number. Generally, the panel's default response for all such system zones is 24-hour trouble (type 19). If desired, this may be changed using the panel's Zone Programming mode.

- Repeat the above procedure for each 4101SN in the system.

SPECIFICATIONS

Physical: Width: 2-1/8" (53mm)
Height: 3-1/4" (84mm) Depth: 1" (25mm)

Electrical:

Polling loop input voltage range: 8-12VDC
Polling loop current draw: 7mA (continuous)
Relay contact rating: 2A @ 28VAC/VDC, resistive loads

Aux Zone:

- 10k EOLR (internal when white jumper intact; external when white jumper cut)
- 300 ohm max zone resistance (excluding EOLR)
- Responds to open or short circuit faults having 250mSec or longer duration
- Class B (style B when used with panels providing earth ground fault detection)
- For UL Commercial Fire Applications, must be used as N.O. zone and white jumper must be cut

AGENCY LISTINGS

- UL864 Commercial Fire
- UL985 Household Fire
- UL1023 Household Burglary
- UL609 Commercial Burglary
- CSFM
- FM
- MEA

WARRANTY

For the latest warranty information, please go to:
<http://www.honeywell.com/security/hsc/resources/wa/>

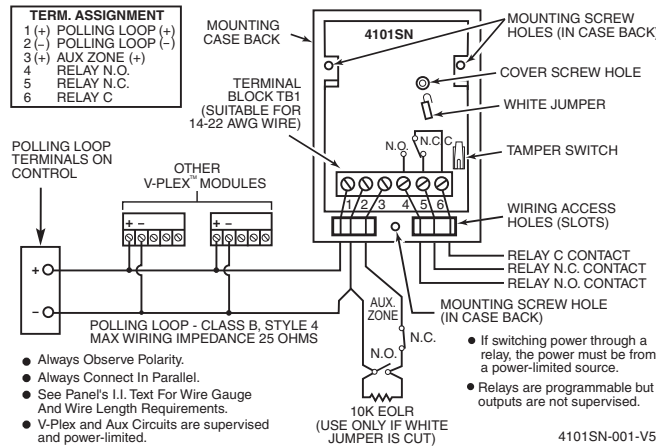


Figure 1: 4101SN V-Plex Single Output Relay Module

SEE THE CONTROL PANEL'S INSTALLATION INSTRUCTIONS FOR COMPLETE INFORMATION REGARDING LIMITATIONS OF THE ENTIRE SECURITY SYSTEM.

Honeywell

2 Corporate Center Drive, Suite 100
P.O. Box 9040, Melville, NY 11747
Copyright © 2009 Honeywell International Inc.
www.honeywell.com/security



K3166V3 10/12 Rev. A